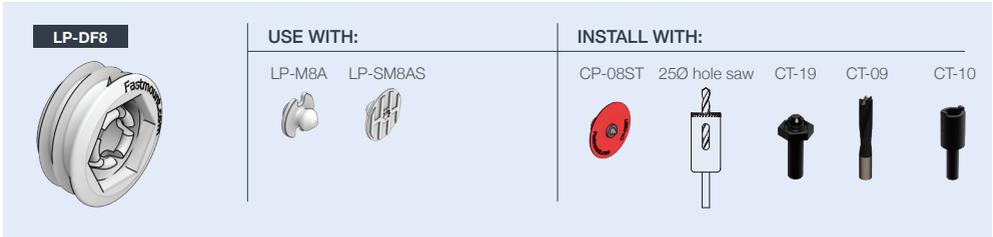


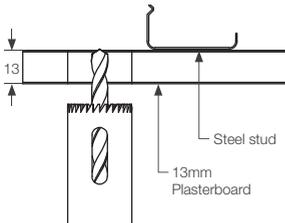
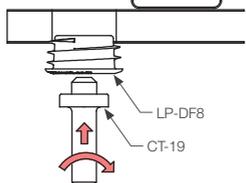
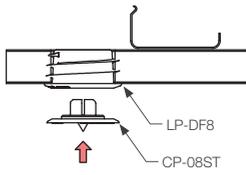
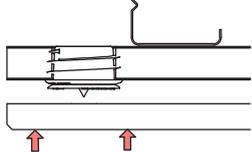
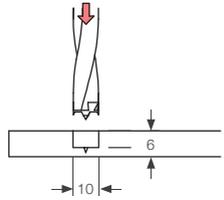
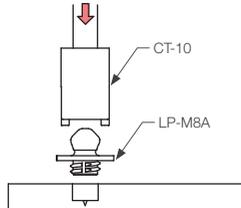
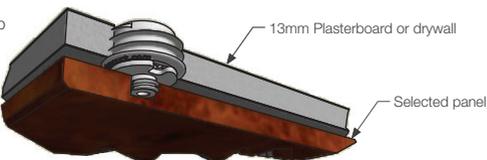
LOW PROFILE LP RANGE

LP-DF8 INSTALLATION GUIDE

LP-DF8 Low Profile Drywall Self Tapping Coarse Thread Female



INSTALLATION STEPS Using LP-M8A - self tapping option. See LP-SM8AS for adhesive fix option

<p>1 Drill 25Ø hole in drywall plasterboard</p>  <p>13 13mm Plasterboard Steel stud</p>	<p>2 Screw LP-DF8 into drywall. Use battery drill with clutch set, fit only once, do not over tighten</p>  <p>LP-DF8 CT-19</p>	<p>3 Fit CP-08ST centre point into LP-DF8</p>  <p>LP-DF8 CP-08ST</p>
<p>4 Press panel onto CP-08ST to mark</p> 	<p>5 Drill panel on mark with CT-09</p>  <p>6 10</p>	<p>6 Screw fit LP-M8A with CT-10. use battery drill with clutch set.</p>  <p>CT-10 LP-M8A</p>
<p>A Cutaway view of installed clip</p>  <p>13mm Plasterboard or drywall Selected panel</p>		 <p>NB. CT-12 to CSK hole edge in hard material (1-2mm)</p>