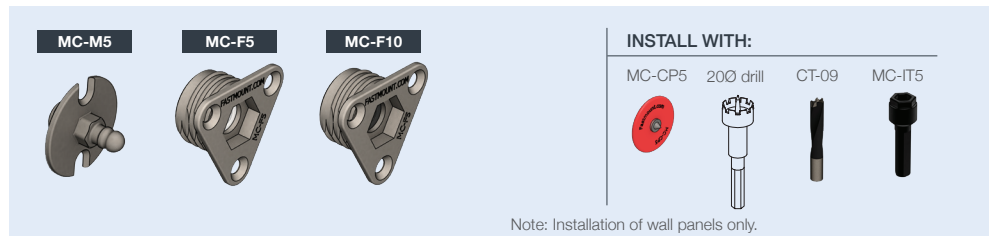


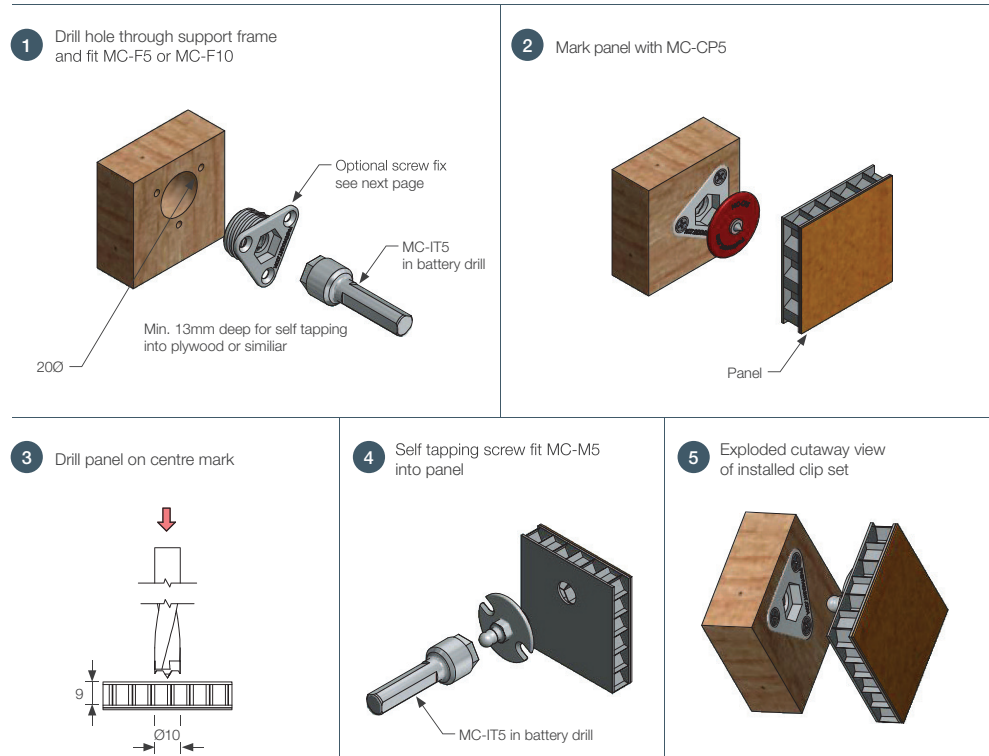
METAL MC RANGE

MC-M5/F5/F10 INSTALLATION GUIDE

MC-M5/F5/F10 INSTALLATION GUIDE (SELF TAPPING)



INSTALLATION STEPS Self tapping method



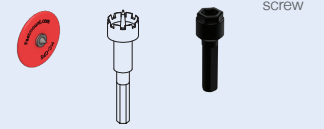


MORE INFO: SETOUT GUIDE TD-02, 09, 12. PRODUCT SHEET MC-05

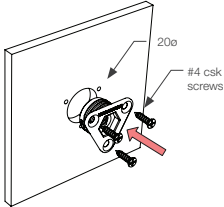
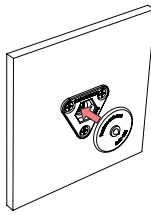
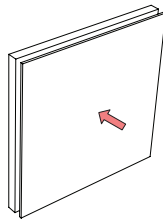
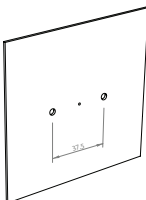
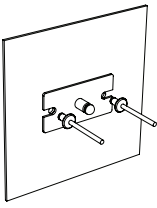
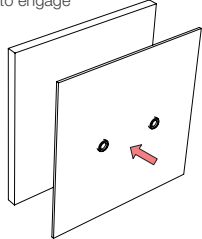
METAL MC RANGE

MC-SM5 INSTALLATION GUIDE

MC-SM5 Metal Male Clip – Surface Mount

<p>MC-SM5</p> 	<p>USE WITH:</p> <p>MC-F5 MC-F10</p>  <p>Note: Installation of wall panels only.</p>	<p>INSTALL WITH:</p> <p>MC-CP5 200 drill MC-IT5 #4 CSK screw</p> 
--	---	--

INSTALLATION STEPS MC-SM5 to MC-F5




<p>1 Drill hole into support frame, fit MC-F5 or MC-F10 with MC-IT5 tool. Option: screw fix with #4 CSK screws</p>  <p>Note: min. 13mm deep for self-tapping into plywood or similar</p>	<p>2 Insert MC-CP5 into female clip to mark panel location</p> 	<p>3 Press panel firmly in position to mark correct MC-SM5 location</p> 
<p>4 Drill holes for screw or rivet fixing. Holes should be a minimum 19mm away from mark</p> 	<p>5 Position MC-SM5 and screw or rivet fix to panel</p> 	<p>6 Press panel against substrate to engage</p> 

MORE INFO: SETOUT GUIDE TD-02, 09, 12. PRODUCT SHEET MC-05

METAL MC RANGE

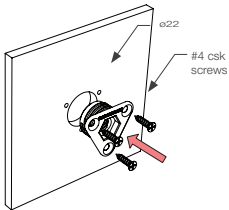
MC-SM5-VHBFR INSTALLATION GUIDE

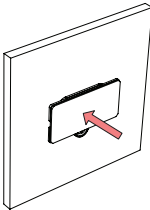
MC-SM5-VHBFR Metal Male Clip – Adhesive Mount Fire-rated

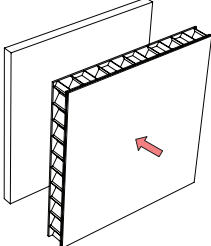
MC-SM5-VHBFR	USE WITH:	INSTALL WITH:
	<div data-bbox="512 395 568 411">MC-F5</div> <div data-bbox="591 395 647 411">MC-F10</div>  <p data-bbox="501 507 658 545">Note: Installation of wall panels only.</p>	<div data-bbox="725 395 792 411">20Ø drill</div> <div data-bbox="837 395 898 427">#4 CSK screw</div> 

INSTALLATION STEPS MC-SM5-VHBFR to MC-F5

- 1 Drill hole into support frame, fit MC-F5 or MC-F10 with MC-IT5 tool. Option: screw fix with #4 CSK screws


- 2 Clip MC-SM5-VHB into female clip, and remove protective backing from adhesive


- 3 Align panel into correct position and press firmly against substrate to fix.



MORE INFO: SETOUT GUIDE TD-02, 09, 12. PRODUCT SHEET MC-05