

# STANDARD PC RANGE

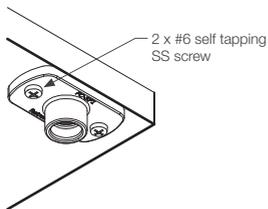
## PC-SF1 INSTALLATION GUIDE

### PC-SF1 Surface Mount Female


PC-SF1	USE WITH:				INSTALL WITH:
	PC-M1B	PC-VM1	PC-M2H	PC-VMX	Screw or rivet
					
	PC-SM2	PC-SVMX	PC-SM2H	PC-SM1AC	
					

### INSTALLATION STEP OPTIONS


- 1 Screw fix PC-SF1 to frame



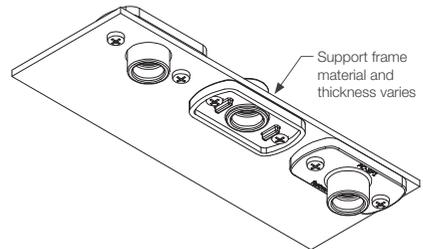- 2 Options for mounting PC-SF1 to support frame



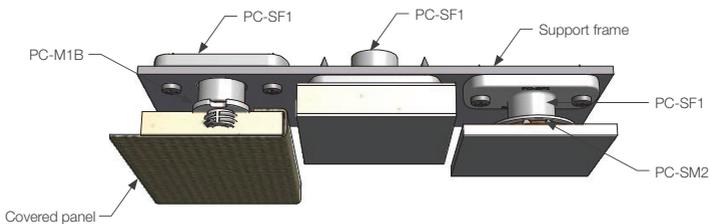- 3 Options for mounting PC-SF1 to support frame and male clip and panel types



MORE INFO: Clip Layout Guide TD-02




# STANDARD PC RANGE
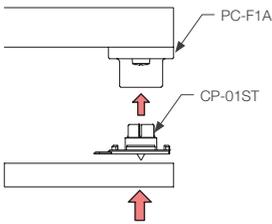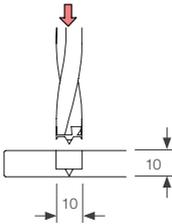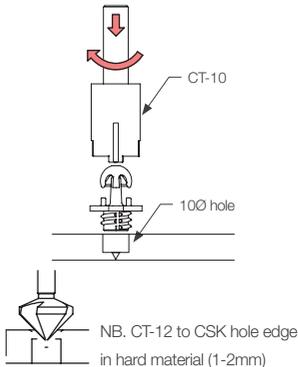
## PC-SF1 INSTALLATION GUIDE




### PC-SF1 Surface Mount Female

PC-SF1	USE WITH:	INSTALL WITH:																						
	<table border="0"> <tr> <td data-bbox="323 395 400 418">PC-M1B</td> <td data-bbox="404 395 470 418">PC-VM1</td> <td data-bbox="473 395 539 418">PC-M2H</td> <td data-bbox="543 395 609 418">PC-VMX</td> </tr> <tr> <td data-bbox="323 422 400 464">  </td> <td data-bbox="404 422 470 464">  </td> <td data-bbox="473 422 539 464">  </td> <td data-bbox="543 422 609 464">  </td> </tr> <tr> <td data-bbox="323 469 400 510">PC-SM2</td> <td data-bbox="404 469 470 510">PC-SVMX</td> <td data-bbox="473 469 539 510">PC-SM2H</td> <td data-bbox="543 469 609 510">PC-SM1AC</td> </tr> <tr> <td data-bbox="323 515 400 557">  </td> <td data-bbox="404 515 470 557">  </td> <td data-bbox="473 515 539 557">  </td> <td data-bbox="543 515 609 557">  </td> </tr> </table>	PC-M1B	PC-VM1	PC-M2H	PC-VMX					PC-SM2	PC-SVMX	PC-SM2H	PC-SM1AC					<table border="0"> <tr> <td data-bbox="729 395 795 418">CP-01ST</td> <td data-bbox="798 395 864 418">CT-09</td> <td data-bbox="868 395 934 418">CT-10</td> </tr> <tr> <td data-bbox="729 422 795 464">  </td> <td data-bbox="798 422 864 464">  </td> <td data-bbox="868 422 934 464">  </td> </tr> </table>	CP-01ST	CT-09	CT-10			
PC-M1B	PC-VM1	PC-M2H	PC-VMX																					
																								
PC-SM2	PC-SVMX	PC-SM2H	PC-SM1AC																					
																								
CP-01ST	CT-09	CT-10																						
																								

### INSTALLATION STEPS

<p><b>1</b> Fit CP-01ST into PC-SF1 then push panel to mark center</p> 	<p><b>2</b> Drill panel on center mark with CT-09 7.5mm deep</p> 	<p><b>3</b> Screw fit male clip with CT-10. Use battery drill with clutch set.</p> 
---	--	--

### INSTALLING ADHESIVE FIT MALE CLIPS (FIRST COMPLETE STEPS 1, PAGE 1)
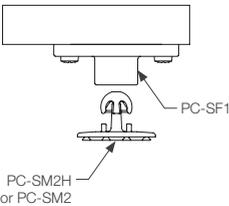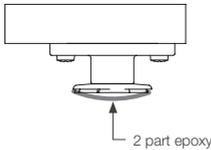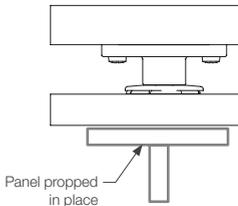
<p><b>4</b> Clip PC-SM2 into PC-SF1</p> 	<p><b>5</b> Apply adhesive to PC-SM2</p> 	<p><b>6</b> Place panel and support while adhesive dries</p> 
---	--	--

MORE INFO: Clip Layout Guide TD-02