

# STANDARD PC RANGE

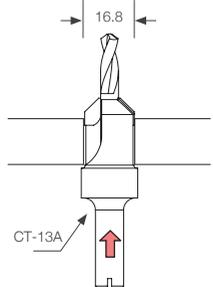
## PC-SVMX INSTALLATION GUIDE

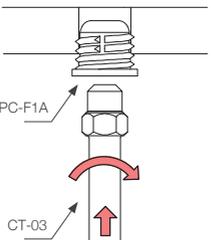
### PC-SVMX Surface Mount Male Screw Fix - 15kg

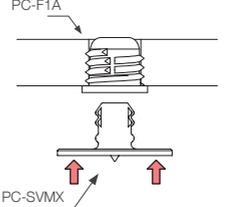
PC-SVMX	USE WITH:	INSTALL WITH:
	<p>PC-F1A</p>  <p>PC-SF1    PC-RF1    PC-AF1</p> 	<p>3 x #6 screw    CT-13A    CT-03    CT-05    CT-05H</p> 

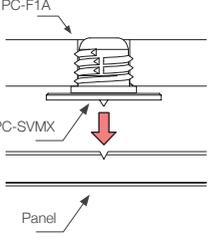
### INSTALLATION STEPS

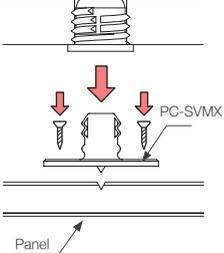
- 1 Drill CT-13A through frame or substrate


- 2 Screw fit PC-F1A with CT-03. Use battery drill with clutch set.


- 3 Clip PC-SVMX into PC-F1A to mark male clip location on panel. If using hard panels e.g. HPL, use CP-01ST to mark location.


- 4 Press panel onto PC-SVMX to mark male clip position on panel.


- 5 Un-clip PC-SVMX from PC-F1A using CT-05, position PC-SVMX in mark and install with 3 x #6 screws


- 6 Clip panel into place.

