









TEXTILE TC RANGE

TC-F6H & TC-M6 INSTALLATION GUIDE

TC-F6H & TC-M6 Textile Clip Range

<p>TC-F6H</p> 	<p>TC-M6</p> 	<p>USE WITH:</p> <p>Upholstery sewing machine using standard foot, size 110/18 needle and V92 thread.</p> <p>#6 screw</p>	<p>INSTALL WITH:</p>  <p>TC-CP6H</p>
---	---	--	--

INSTALLATION STEPS
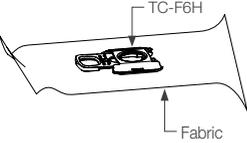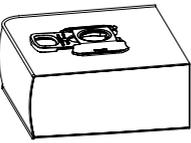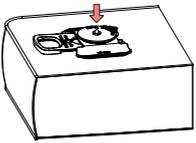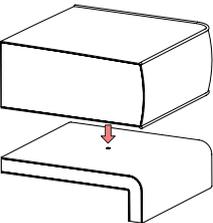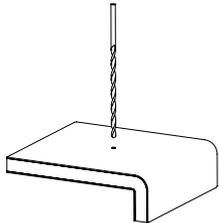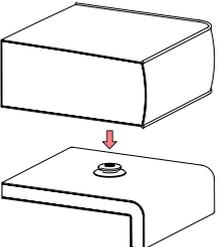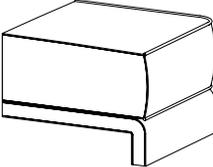
<p>1 Sew TC-F6H to fabric using 110/18 needle and V92 size thread along stitch groove.</p>  <p>TC-F6H</p> <p>Fabric</p>	<p>2 Complete cushion assembly.</p>  <p>Cushion</p>	<p>3 Insert TC-CP6H into TC-F6H. Press slider to hold TC-CP6 in place</p> 	<p>4 Align cushion and press firmly on mounting surface.</p> 
<p>5 Drill on mark.</p> 	<p>6 Screw TC-M6 onto base using #6 gauge CSK screw.</p> 	<p>7 Align cushion with TC-M6.</p> 	<p>7 Press cushion into place. To engage, slide lock away from cushion edge, to disengage, pull lock towards edge.</p> 

TEXTILE TC RANGE

TC-F6H & TC-SM6 INSTALLATION GUIDE

TC-F6H & TC-SM6 Textile Clip Range

TC-F6H

TC-SM6


USE WITH:

Upholstery sewing machine using standard foot, size 110/18 needle and V92 thread.


For optimum adhesion, wipe the mounting surface clean with alcohol or solvent wipe and dry before pressing TC-SM6 to surface. Wait 24 - 72 hours before installing cushions.

INSTALLATION STEPS:


- 1** Sew TC-F6H to fabric using 110/18 needle and V92 size thread along stitch groove.

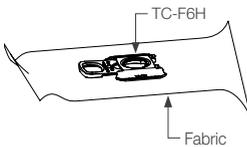


- 1B** Close up of TC-F6H sewn on

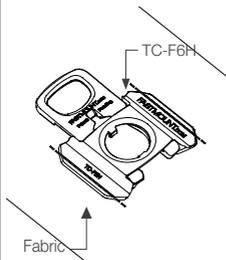


- 2** Complete cushion assembly

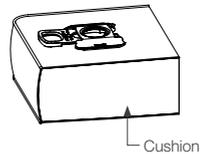


- 3** Insert TC-SM6 into TC-F6H

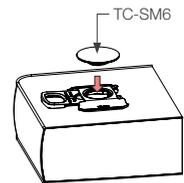


- 4** Lock TC-F6H

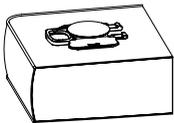


- 5** Peel off TC-SM6 backing

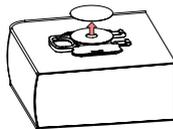

- 6** Align cushion in position

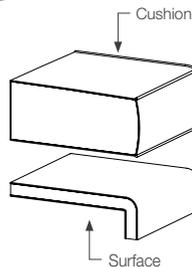

- 7** Press down firmly in place. To disengage, pull slide lock towards edge of cushion.

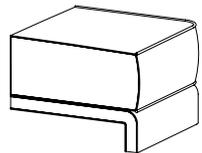

TEXTILE TC RANGE

TC-F6H & TC-SM6S INSTALLATION GUIDE

TC-F6H & TC-SM6S Textile Clip Range

TC-F6H

TC-SM6S

USE WITH:


Upholstery sewing machine using standard foot, size 110/18 needle and V92 thread.

INSTALLATION STEPS


- 1** Cut fabric to shape.




- 2** Mark location of TC-SM6S and position clip about 70mm away from edge.

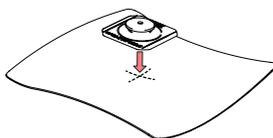


- 3** Sew TC-SM6S to fabric using 110/18 needle and V92 size thread along stitch groove.

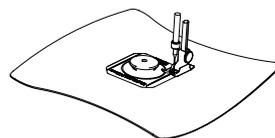


- 4** Cut cushion fabric to shape

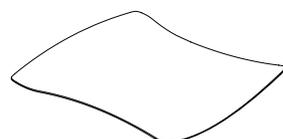


- 5** Mark location of TC-F6H and position clip about 70mm away from cushion edge

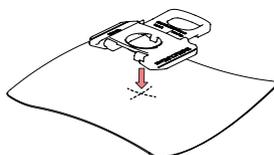

- 6** Sew TC-F6H to fabric using 110/18 needle and V92 size thread along stitch groove.

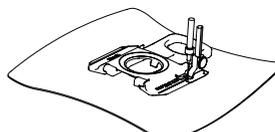

- 7** Complete construction of cushion

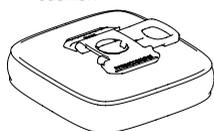

- 8** To lock cushion into place, align clips. To engage, slide lock away from cushion edge, to disengage, pull lock towards edge of cushion.

